

 


T60 HE 磁轴键盘

温馨提示:本说明书中的图片均为示意图,仅供参考,请以实物为准。


产品概述

01

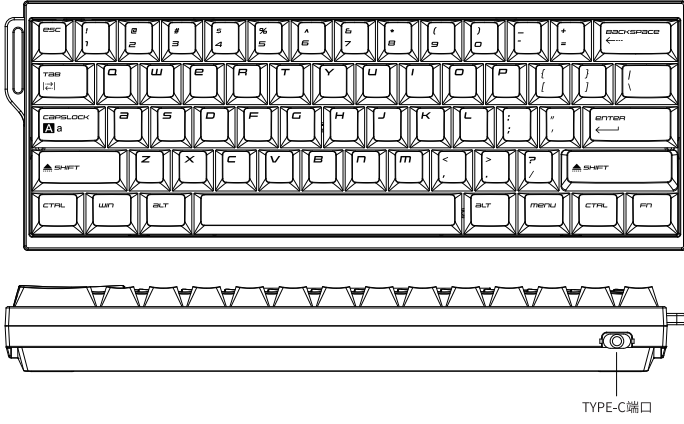

组合键功能

02

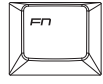


|        |                                |
|--------|--------------------------------|
| ESC    | 短按“`~”,长按2秒,恢复出厂设置             |
| TAB    | MAC系统下F区和FN+F区逻辑切换             |
| 左-WIN  | 锁住左WIN键 (IOS_MAC OS系统下自动解锁)    |
| M      | 长按2秒切换到MAC系统,切换成功后,M字键白光闪烁3次提示 |
| N      | 长按2秒切换到WIN系统,切换成功后,N字键白光闪烁3次提示 |
| 空格     | 输入网页驱动网址                       |
| /?     | 方向键 上                          |
| MENU   | 方向键 下                          |
| 右-ALT  | 方向键 左                          |
| 右-CTRL | 方向键 右                          |



|         |                          |
|---------|--------------------------|
| ENTER   | 切换灯光模式                   |
| 右-SHIFT | 切换灯光颜色                   |
| '"      | 直接进入常亮模式                 |
| ,>      | 循环调节背光亮度,默认最高档(由高往低循环切换) |
| ,<      | 循环调节背光速度,默认最3档(由高往低循环切换) |

组合键功能 Windows\_Android 系统模式

04

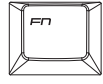

|     |     |    |      |
|-----|-----|----|------|
| 1!  | F1  | U  | PRT  |
| 2@  | F2  | J  | SCR  |
| 3#  | F3  | I  | INS  |
| 4\$ | F4  | O  | HOME |
| 5%  | F5  | P  | Pgup |
| 6^  | F6  | K  | DEL  |
| 7&  | F7  | L  | END  |
| 8*  | F8  | ;; | PGDN |
| 9(  | F9  | {[ | 音量 - |
| 0)  | F10 | }] | 音量 + |
| -_  | F11 | \  | 静音   |
| =+  | F12 |    |      |

组合键功能 IOS\_MAC系统模式

05




|     | 模式1   | 模式2 |      |         |
|-----|-------|-----|------|---------|
| 1!  | 亮度-   | F1  | U    | PRT     |
| 2@  | 亮度+   | F2  | J    | SCR     |
| 3#  | 多任务   | F3  | I    | INS     |
| 4\$ | 启动台   | F4  | O    | HOME    |
| 5%  | F5    | F5  | P    | Pgup    |
| 6^  | F6    | F6  | K    | DEL     |
| 7&  | 上一曲   | F7  | L    | END     |
| 8*  | 播放\暂停 | F8  | ;;   | PGDN    |
| 9(  | 下一曲   | F9  | CTRL | control |
| 0)  | 静音    | F10 | ALT  | command |
| -_  | 音量-   | F11 | WIN  | option  |
| =+  | 音量+   | F12 |      |         |

\*模式1与模式2通过FN+TAB切换

系统模式

06

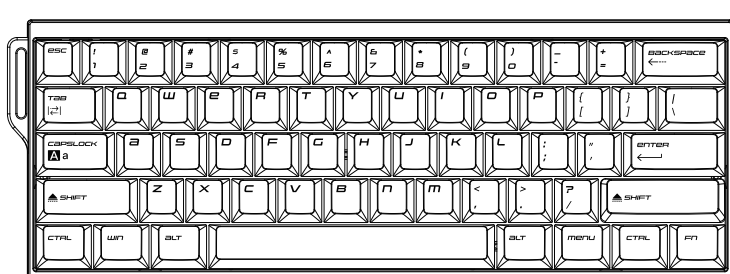

\*可通过长按2秒组合键 (FN+M) 进行MAC系统切换  
可通过长按2秒组合键 (FN+N) 进行WIN系统切换

IOS / MAC

|        |         |
|--------|---------|
| 左-Ctrl | control |
| 左-Alt  | command |
| 左-Win  | option  |
| 右-Alt  | command |
| 右-Ctrl | control |

参数简介

07




# T60 HE
 
## Magnetic Gaming Keyboard

Warm reminder: All the pictures in this manual are schematic diagrams for reference only. Please refer to the actual product.

Product Overview

01

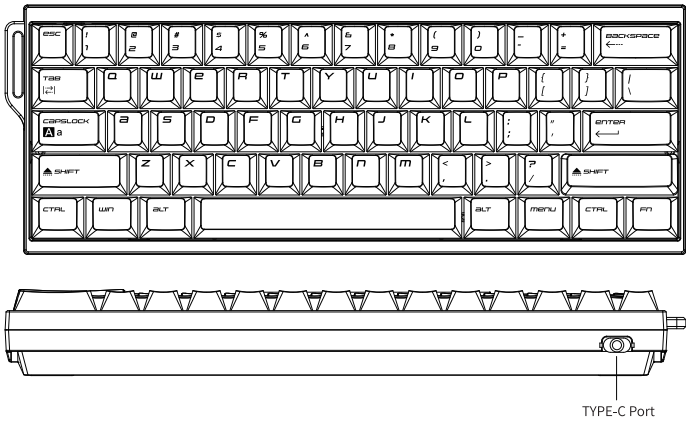

TYPE-C Port

Combination key function

02



|        |                                                                                                                                                             |
|--------|-------------------------------------------------------------------------------------------------------------------------------------------------------------|
| ESC    | Press and hold the "`~" button briefly for 2 seconds to restore the factory Settings                                                                        |
| TAB    | Logical switching between the F area and FN+F area in the MAC system                                                                                        |
| L-WIN  | Lock the left WIN key (ios_automatically unlocked on MAC OS)                                                                                                |
| M      | Press and hold for 2 seconds to switch to the MAC system. After the switch is successful, the M key will flash three times with white light as a prompt     |
| N      | Press and hold for 2 seconds to switch to the Windows system. After the switch is successful, the N key will flash three times with white light as a prompt |
| Space  | Enter the web page driver URL                                                                                                                               |
| /?     | Direction keys Up                                                                                                                                           |
| MENU   | Direction keys Down                                                                                                                                         |
| R-ALT  | Direction keys Left                                                                                                                                         |
| R-CTRL | Direction keys Right                                                                                                                                        |

Combination key function

03



|         |                                                                                                                 |
|---------|-----------------------------------------------------------------------------------------------------------------|
| ENTER   | Switch the lighting mode                                                                                        |
| R-SHIFT | Switch the color of the light                                                                                   |
| ' "     | Enter the always-on mode directly                                                                               |
| . >     | Cyclically adjust the backlight brightness, with the default highest level (cyclically switch from high to low) |
| , <     | Cyclically adjust the backlight speed, with a default of up to 3 Settings (cyclically switch from high to low)  |

Combination key function

### Windows\_Android System mode

04



|     |     |    |          |
|-----|-----|----|----------|
| 1!  | F1  | U  | PRT      |
| 2@  | F2  | J  | SCR      |
| 3#  | F3  | I  | INS      |
| 4\$ | F4  | O  | HOME     |
| 5%  | F5  | P  | Pgup     |
| 6^  | F6  | K  | DEL      |
| 7&  | F7  | L  | END      |
| 8*  | F8  | ;: | PGDN     |
| 9(  | F9  | {[ | Volume - |
| 0)  | F10 | }] | Volume + |
| -_  | F11 | \  | Mute     |
| =+  | F12 |    |          |

Combination key function

### IOS\_MAC System mode

05




|     | Mode 1          | Mode 2 |      |         |
|-----|-----------------|--------|------|---------|
| 1!  | Brightness-     | F1     | U    | PRT     |
| 2@  | Brightness+     | F2     | J    | SCR     |
| 3#  | Multitasking    | F3     | I    | INS     |
| 4\$ | Firing platform | F4     | O    | HOME    |
| 5%  | F5              | F5     | P    | Pgup    |
| 6^  | F6              | F6     | K    | DEL     |
| 7&  | PREV            | F7     | L    | END     |
| 8*  | Play/Pause      | F8     | ;:   | PGDN    |
| 9(  | NEXT            | F9     | CTRL | control |
| 0)  | Mute            | F10    | ALT  | command |
| -_  | Volume-         | F11    | WIN  | option  |
| =+  | Volume+         | F12    |      |         |

\*Mode 1 and Mode 2 are switched by FN+TAB

System mode

06

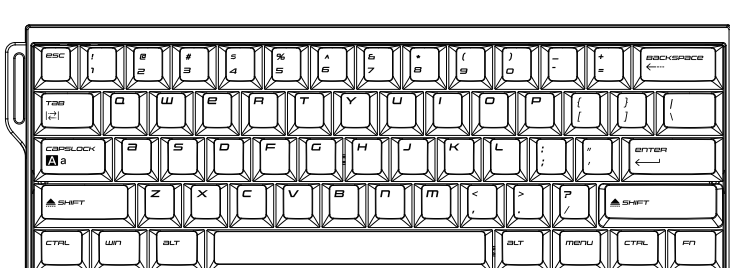

\*You can switch the MAC system by holding down the key combination (FN+M) for 2 seconds  
\*You can switch the Windows system by holding down the key combination (FN+N) for 2 seconds

#### IOS / MAC

|        |         |
|--------|---------|
| L-Ctrl | control |
| L-Alt  | command |
| L-Win  | option  |
| R-Alt  | command |
| R-Ctrl | control |

Introduction to Parameters

08